TECHNICAL SHEET HARNESS SAFELIY REFERENCE: PAX-DLF-P0



DIELECTRIC HARNESS WITH 4 POINTS CONNECTION

Description

X model Dielectric harness with 4 points connection. It has 2 lateral, 1 pectoral and 1 dorsal rings with dielectric coating suitable to endure electric shocks, friction and corrosion. Adjustable on chest and legs areas to fit comfortably the user's body.

The harness is made in two colors (black and orange) allowing better differentiation between its parts for easy use.

General Information

The harness with reference PAX-DLF-P0 is a dielectric equipment (no arc flash)


Dielectric resistance of 14kN. The D rings and connecting buckles are 100% coated.

With a steel core of 5000 pounds traction strength.

The harness is part of the Personal Fall Protection System and its use is recommended when carrying out work at heights. (according to requirements established by Colombian Government law, resolucion 1409 de 2012).

Its main function is to correctly distribute the force produced by the braking impact and allow the user to be suspended vertically. With an angle of inclination about 30° .

This harness should be supplemented with lanyard ref. GED-DSRP-1F (simple dielectric detention lanyard) or ref. GED-DSRP-2F or any lanyard with similar features. In case of descent and ascent activities it is recommended to use Y-Lanyards with energy absorbing system as ref. GED-DYRP-2F and dielectric anchorage as PAN-DRP-2D/PAN-DRP-0.

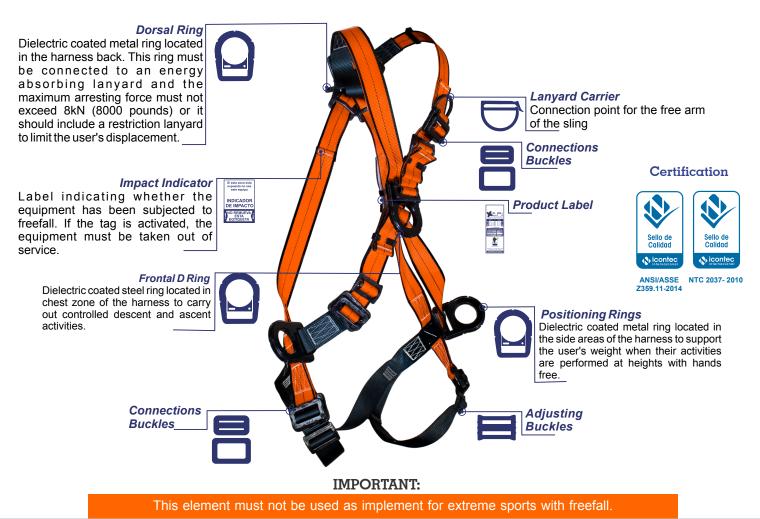

DIELECTRIC HARNESS WITH 4 POINTS CONNECTION

Technical Features

- 100% polyester webbing with resistance to friction and abrasion.
- Includes label with product information and blank spaces to inspection.
- Label for custom marking with name and RH.
- Seam made of high resistance polyester thread.
- Dielectric coated metal rings.
- Includes adjusting buckles to hold the spare webbing.
- Manufactured in 45mm wide webbing.
- Webbing and seams for easy inspection.
- Integrated impact indicator.
- Includes lanyards carrier.
- This equipment meets requirements of ANSI/ASSE Z359.15-2014 and NTC 2037-2010

Applications:

- Fall Arrest
- Movement Restriction
- Positioning on structures and poles
 - Controlled ascent and descent activities (frontal ring)
- To be used at:

Mining, Industry, Installations Construction Cabling Outside Cleaning Painting Electrical networks Specialized Work

(dorsal ring)

(dorsal ring)

(lateral rings)

Technical information

REFERENCE	Q	REGULATORY REQUIREMENTS					
		NORM	MIN.STRENGH	REAL VALUE	MATERIAL	COLOR	WEIGHT
Webbing		ANSI Z359.11-2014	22.2kN	29 kN	Polyester	Oranje / Black	
		NTC 2037-2010	22.2kN				
Connection Buckle	4	ANSI Z359.12-2009	15 kN	18,5 kN	Dielectric covering (polymer/ Steel)	Black	112g
		NTC 2037-2010	17,8 kN				
Dorsal D ring	1	ANSI Z359.12-2009	22.2kN	32 kN	Dielectric covering (polymer/ Steel)	Black	172g
		NTC 2037-2010					
Lateral D rings	2	ANSI Z359.12-2009	22.2kN	32 kN	Dielectric covering (polymer/ Steel)	Black	172g
		NTC 2037-2010	22.2kN				
Front D rings	1	ANSI Z359.12-2009	22.2kN	32 kN	Dielectric covering (polymer/ Steel)	Black	172g
		NTC 2037-2010	22.2kN				
Lanyard carrier	1	ANSI/Z359.11-2014	Menor a 500 N	215 N	Dielectric covering (polymer/ Steel)	Black	5,4g

IMPORTANT:


The service life of this product is given by the use, care, maintenance and proper storage

Lab tests

Static Resistance (To test dorsal, frontal, pectoral and lateral connection points)! ANSI 2359.11-2014 NSI 2359.11-2014 It must oendure a 16kN load in each of the connection points (inga) during a minute windout breaking, fraying or melease th torse. The slip on the adjustable buckles Teker's no slip of adjustable buckles. YES Dynamic Performance (Simulating standin fail be test dorsal, frontal and pe to rail connection points) ANSI 2359.11-2014 The harness is dropped from a height which must generated n impact force angle of ropose must be less than 30° and for fail with the pectoral ings, this angle for gone must be less than 30°. The angle of ropose is: minutes. For fails with the dorsal ings, this angle of ropose must be less than 30°. The harness stretch is in the range of s0-250mm. The harness stretch is in the range of s0-250mm. The harness stretch is in the range of s0-250mm. YES Dynamic Performance connection point) ANSI 2359.11-2014 The harness is dropped from a height which allows a heed fail with an impact force more than 15kN. At the fail moment he harness must hold the torso at less minutes and the angle of repose must be used and has to activated at the moment force more than 15kN. At the fail moment force more than 513.2013 nom must be used and has to activated at the moment force more than 513.2013 nom must be used and has to activated at the moment for fail with ANSI 2359.11-2014 The harness is dropped from a height which allows a fail of form. An enginy who more than 5 minutes. The enresy absorber was andivated after the fail. YES Fall Indicator Test (To test only dorsal connection point)	TEST	NORM	REQUIREMENTS	TEST RESULTS	FULFILLS	
connection points) torso. The slip on the adjustable buckles. interest no slip of adjustable buckles. <t< td=""><td>(To test dorsal, frontal,</td><td rowspan="3">ANSI Z359.11-2014</td><td>connection points (rings) during a minute</td><td>connection point</td><td rowspan="3">YES</td></t<>	(To test dorsal, frontal,	ANSI Z359.11-2014	connection points (rings) during a minute	connection point	YES	
Image: constant of adjustable buckles.The solid of adjustable buckles.Dynamic Performance (Simulating standing fail to test dorsal, frontal and pectoral connection points)ANSI 2359.11-2014 angle of repose must bucks the fail moment the harness must hold the forso at less 5 minutes. For fails with the dorsal ring, this angle or fail with the pectoral rings, this angle or fail with an impute pectoral commence the harness must hold the torso at less by the angle of repose is the same of the same of the same the same of the			torso. The slip on the adjustable buckles			
(Simulating standing fail to test dorsal, frontal and pectoral connection points) which must generated n impact force greater han 16kN. At the fail moment the harness must hold the torso at less 1 angle of repose must hold the dorsa in ing, this angle of repose must be less than 30° and for fail with the pectoral rings, this angle of source more than 50°. The harness stretch is in the range of 50-250mm. The harness stretch is in the range of 50-250mm. The harness sheld the torso more than 5 minutes. YES Dynamic Performance (Simulating a head fail to test only dorsal connection point) ANSI 2359.11-2014 ANSI 2359.11-2014 The harness is dropped from a height which allows a head fail with an impact force more than 16kN. At the fail moment the harness must hold the torso ot less invitues and the angle of repose must be less than 30°. The conce impact generated is greater than 16Kn YES Fail Indicator Test Connection point) ANSI 2359.11-2014 The harness is dropped from a height which allows a fail of 610mm. An energy absorbe configet with ANSI 2359.11-2014 The harness is dropped from a height which allows a fail of 610mm. An energy absorbe more than 5 minutes. The energy absorbe rativated after the fail. YES Static Resistance (To test only dorsal connection point) NTC 2037-2010 It must to endure a 22,2kN load in the forse in or sing of adjustable must to be higher than 25mm. There's no breaking, fraying nor release of the torso. There's no sing of adjustable more than 5 minutes. Dynamic Performance (Simulating fail to test only dorsal connection point) NTC 2037-2010 The						
pectoral connection points) Namess must hold the torso at less and of repose is: angle of repose must be less than 30°. The angle of repose is: broad: Between 8° and 29° Pectoral: YES Pynamic Performance (Simulating a head fall to test only dorsal connection point) ANSI Z359.11-2014 The harness is dropped from a height which allows a head fall with an impact force more than 16kN. At the fall moment force more than 30°. The angle of repose is between 8° and 29° The harness held the torso more than 5 minutes. YES Fall Indicator Test (To test only dorsal connection point) ANSI Z359.11-2014 The harness is dropped from a height which allows a fall of 610mm. An energy absorber must not be higher than 25mm. ZetN load was applied. There's no slop of adjustable buckles. There's no slop of adjustable buckles. Pynamic Performance (Simulating a head and standing fall to test only dorsal connection point) NTC 2037-2010 It must to endure a 22,2kN load in the dorsal connection point during a minute must not be higher than 25mm. ZetN load was applied. There's no slop of adjustable buckles. The sames held the torso. more than 5 minutes. NTC 2037-2010	(Simulating standing fall to test dorsal, frontal and pectoral connection		which must generated n impact force greater than 16kN. At the fall moment the harness must hold the torso at less 5 minutes. For falls with the dorsal ring, the angle of repose must be less than 30 ^a and for fall with the pectoral rings, this angle most be less than 50 ^a . The harness stretch		YES	
Instantion of the famess stretch must be less than 457mm. Instantion of the famess stretch must be less than 457mm. Instantion of the famess held the torso more than 5 minutes. Dynamic Performance (Simulating a head fall to test only dorsal connection point) ANSI Z359.11-2014 The harness is dropped from a height which allows a head fall with an impact force more than 16kN. At the fall moment the harness must hold the torso at less 5 minutes and the angle of repose must be less than 30°. The force impact generated is greater than 16Kn. YES Fall Indicator Test ANSI Z359.11-2014 The harness is dropped from a height which allows a fail of 610mm. An energy absorber was allows a fail of 610mm. An energy absorber was activated after the fall. The energy absorber was activated after the fall. YES Static Resistance (To test only dorsal (To test only dorsal (To test only dorsal (Simulating a head and standing fall to test only dorsal connection point) It must to endure a 22,2kN load in the invest one than 5 minutes. There's no breaking, fraying must not be higher than 25mm. YES Dynamic Performance (Simulating a head and standing fall to test only dorsal connection point) NTC 2037-2010 The harness is dropped from a height which allows a fall of 1M. Atthefall moment the harness must hold the torso at less pleas than 30°. The harness held the torso. more than 5 minutes. YES Dynamic Performance (Simulating a head and standing fall to test only dorsal connection point) NTC 2037-2010 The harness is dropped from a height which allows a fall of 1M. Att				Dorsal: Between 8 ^a and 29 ^a		
Image: Constraint of the harmess held the torso more than 5 minutes.The harmess held the torso more than 16kn. At the fall moment force more than 16kn. At the fall moment the harmess must hold the torso at less 5 minutes and the angle of repose is between 8° and 29°.The harmess held the torso more than 5 minutes.YESFall Indicator TestANSI Z359.11-2014The harmess is dropped from a height which allows a fall of 610mm. An energy absorber certified with ANSI Z359.13-2013 norm must be used and has to activated at the moment of the fall.The energy absorber was activated after the fall.YESStatic Resistance (To test only dorsal connection point)NTC 2037-2010It must to endure a 22.2kN load in the dorsal connection point during a minute must not be higher than 25mm.ZEN load was applied.There's no slip of adjustable buckles must not be higher than 25mm.YESDynamic Performance (Simulating al head and and standing fall to test only dorsal connection point)NTC 2037-2010The harmess is dropped from a height which allows a fall of 11M. Atthe fall moment of the harmess.The harmess held the torso. more than 5 minutes.YESDynamic Performance (Simulating al head and standing fall to test only dorsal connection point)NTC 2037-2010The harmess is dropped from a height which allows a fall of 11M. Atthe fall moment of the harmess.The harmess held the torso. more than 5 minutes.The ense sheld the to						
(Simulating a head fall to test only dorsal connection point) which allows a head fall with an impact force more than 16kN. At the fall moment, the harness must hold the torso at less 5 intutes and the angle of repose must bit less than 30°. greater than 16KN The angle of repose is between 8° and 29° YES Fall Indicator Test ANSI Z359.11-2014 The harness is dropped from a height which allows a fall of 610mm. An energy absorber with ANSI Z359.13-2013 norm must be used and has to activated at the moment of the fall. The energy absorber was activated after the fall. YES Static Resistance (To test only dorsal connection point) NTC 2037-2010 It must to endure a 22,2kN load in the dorsal connection point during a minute torso. The slip on the adjustable buckles must not be higher than 25mm. There's no breaking, fraying nor release of the torso. There's no slip of adjustable buckles. YES Dynamic Performance (Simulating a head and dorsal connection point) NTC 2037-2010 The harness is dropped from a height fail moment, the harness must hold the torso at less minutes and the angle of repose must be buckles. There's no slip of adjustable buckles. YES Dynamic Performance (Simulating fall to test only dorsal connection point) NTC 2037-2010 The harness is dropped from a height fall moment, the harness must hold the torso at less minutes and the angle of repose must be between 9° and 10° Standing fall: Between 9° and 10° Standing f			must be less than 457mm.			
connection point)the harness must hold the torso at less 5 minutes and the angle of repose must bi less than 30°.If he angle of repose must bi between 8° and 29° The harness held the torso more than 5 minutes.YESFall Indicator TestANSI Z359.11-2014The harness is dropped from a height which allows a fall of 610mm. An energy absorber certified with ANSI Z359.13-2013 norm must be used and has to activated at the moment of the fall.The energy absorber was activated after the fall.YESStatic Resistance (To test only dorsal connection point)NTC 2037-2010It must to endure a 22,2kN load in the dorsal connection point during a minute torso. The slip on the adjustable bucklesZ2kN load was applied. There's no breaking, fraying nor release of the torso. There's no slip of adjustable buckles.YESDynamic Performance (Simulating a head and standing fall to test only dorsal connection point)NTC 2037-2010The harness is dropped from a height which allows a fall of 1M. At the fall moment, the harness must hold the torso at less 5 minutes and the angle of repose must bi less than 30°.The harness held the torso. more than 5 minutes.YESDynamic Performance (Simulating a head and standing fall to test only dorsal connection point)NTC 2037-2010The harness is dropped from a height which allows a fall of 1M. At the fall moment, the harness must hold the torso at less 5 minutes and the angle of repose must bi less than 30°.The harness held the torso. more than 5 minutes.YESPyramic Performance (Simulating a head and standing fall to test only dorsal connection point)NTC 2037-2010The harness is dropped from	(Simulating a head fall to test only dorsal	ANSI Z359.11-2014	which allows a head fall with an impact force more than 16kN. At the fall moment, the harness must hold the torso at less 5		YES	
Image:				č i		
allows a fail of 610mm. An energy absorber certified with ANSI Z359.13-2013 nom must be used and has to activated at the moment of the fail.activated after the fail.YESStatic Resistance (To test only dorsal connection point)NTC 2037-2010It must to endure a 22,2kN load in the dorsal connection point during a minute without breaking, fraying or release the torso. The slip on the adjustable buckles must not be higher than 25mm.22kN load was applied. There's no breaking, fraying nor release of the torso. There's no slip of adjustable buckles.YESDynamic Performance (Simulating a head and standing fall to test only dorsal connection point)NTC 2037-2010The harness is dropped from a height which allows a fall of 1M. At the fall moment the harness must hold the torso at less 5 Head fall: Between 9a and 10a Standing fall: Between 9a and 10a Standing fall: Between 9a and 10a Standing fall: Between 8a and 19aYES			- · ·			
(To test only dorsal connection point)dorsal connection point during a minute without breaking, fraying or release the torso. The slip on the adjustable buckles must not be higher than 25mm.There's no breaking, fraying nor release of the torso. There's no slip of adjustable buckles.YESDynamic Performance (Simulating a head and standing fall to test only dorsal connection point)NTC 2037-2010The harness is dropped from a height which allows a fall of 1M. At the fall moment the harness must hold the torso at less 5 minutes and the angle of repose must be less than 30°.The torso was not released by the harness. The torso was not released by the harness. The angle of repose is: Head fall: Between 9° and 10° Standing fall: Between 8° and 19°YES	Fall Indicator Test	ANSI Z359.11-2014	allows a fall of 610mm. An energy absorber certified with ANSI Z359.13-2013 norm must be used and has to activated at the moment of		YES	
connection point)without breaking, fraying or release the torso. The slip on the adjustable buckles must not be higher than 25mm.There's no slip of adjustable buckles.YESDynamic Performance (Simulating a head and standing fall to test only dorsal connection point)NTC 2037-2010The harness is dropped from a height which allows a fall of 1M. At the fall moment, the harness must hold the torso at less 5 minutes and the angle of repose must be less than 30°.The harness not released by the harness.The harness beld the torso. more than 5 minutes.YESYES				22kN load was applied.		
Dynamic Performance (Simulating a head and standing fall to test only dorsal connection point)NTC 2037-2010The harness is dropped from a height which allows a fall of 1M. At the fall moment, the harness must hold the torso at less 5 minutes and the angle of repose must bile less than 30°.The harness held the torso. more than 5 minutes.The harness held the torso. more than 5 minutes.YESYES	· · ·		without breaking, fraying or release the		YES	
(Simulating a head and standing fall to test only dorsal connection point)which allows a fall of 1M. At the fall moment, the harness must hold the torso at less 5 minutes and the angle of repose must be less than 30°.more than 5 minutes.YESThe torso was not released by the harness.The torso was not released by the harness.YES			· · ·			
dorsal connection point) minutes and the angle of repose must be less than 30°. The torso was not released by the harness. YES The angle of repose is: Head fall: Between 9° and 10° Standing fall: Between 8° and 19° Standing fall: Between 8° and 19°	(Simulating a head and standing fall to test only		which allows a fall of 1M. At the fall moment,		YES	
Head fall: Between 9 ^a and 10 ^a Standing fall: Between 8 ^a and 19 ^a			minutes and the angle of repose must be			
IMPORTANT:				Head fall: Between 9 ^a and 10 ^a Standing fall: Between 8 ^a and		

The service life of this product is given by the use, care, maintenance and proper storage.



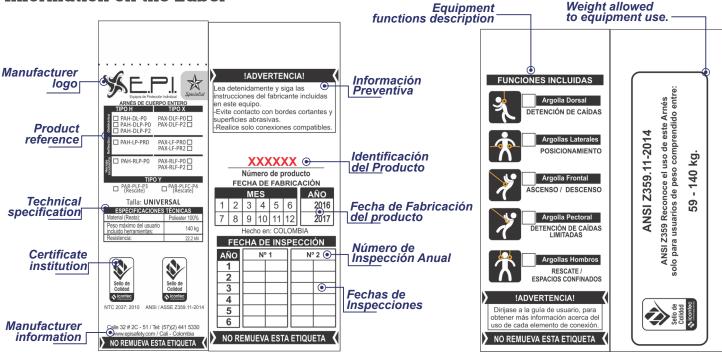

Warnings

-The service life of this product is given by the use, care, maintenance and proper storage.

-Service life timeline starts at the moment the harness is subjected to first use. It should not be used manufacturing time to determine service time.

-It must be to follow instructions included within the harness at the moment it is dispatched.

-Before using this product, make a correct calculation of the requirements needed (height, activity, kind of work) to be sure the product is suitable. -Do not alter the product.

-This product is not fire or chemic resistant, therefore take the necessary precautions for use in environments that have these sources of risk.

-This product offers limited protection in highly corrosive environments, therefore take the necessary precautions to protect the product and prolong its service life.

-This product has not sunlight protection so avoid long sun exposure which could cause discoloration on the product. Take the necessary precautions to protect the product and prolong its service life.

-The user must be trained to use this equipment, so they must meet the training requirements established by Colombian Government law (resolucion 1409 de 2012).

Warranty Policies

-This product is certified under quality standards ANSI Z359. 11-2014 and NCT 2037-2010 -Warranty applies ONLY before first use due to manufacturing defects or defects of any of its parts. -As manufacturing defects: Fraying in ropes or seams, rips, damaged plastic buckles, missing parts.

The product will be not accepted if presents:

-webbing with paint contamination or it is frayed by external elements.

-The seams show wear.

-Lack of any of the labels due to being torn off or illegibility of them by use.

-Damage on metal parts such as breaks, sharp edges, deformation, corrosion, chemical attack, alteration and abusive use.

-Damage on webbing produced by knots, excessive elongation, chemical attack, sulfation, excessive dirt, abrasion, alteration, excessive lubrication and abusive use.

-Alteration, Absence of parts, evidence of damage due to improperly performed functions, or by mechanical devices and connectors.

-Damage produced by fire, flames or radiation or any other element that can burn the fibers.

Note:

-It is important to read all the information included in the instruction guide before using any product.

-The company is not responsible for any product that has been repaired outside its facilities.

-Exchange of products due to low rotation is not accepted.

IMPORTANT:

Service life timeline starts at the moment the harness is subjected to first use